

**SELEC** **MX300-1-C-CE**  
Operating Instructions



**SPECIFICATIONS**

- DISPLAY**  
1 row of 4 digits to show electrical parameters  
7 segment LED display  
Digit integrated with parameter units.
- INDICATIONS**  
R2 :Relay  
K :Kilo  
M :Mega  
V :Voltage  
A :Current  
W :Active Power  
VA :Apparent Power  
Var :Reactive power  
TRIP :When trip condition occurs  
Hz :Frequency  
PF :Power factor  
⇐ :Communication in progress
- RATED INPUT VOLTAGE**  
20 to 300V AC (L-N)  
34 to 519V AC (L-L)  
Installation Category II
- FREQUENCY RANGE**  
45-65 Hz
- RATED INPUT CURRENT**  
Nominal 5A AC (Min-40mA, Max-6A)
- BURDEN**  
0.1 VA@5A
- CT PRIMARY**  
5A to 9999A (Programmable for any Value)
- CT SECONDARY**  
5A
- PT PRIMARY**  
100V to 500kV  
(Programmable for any value)
- PT SECONDARY**  
100V to 500V AC (L-L)  
(Programmable for any value)
- DISPLAY UPDATE TIME**  
1 sec. for all parameters
- DISPLAY SCROLLING**  
Automatic or Manual (Programmable)
- POWER CONSUMPTION**  
Less than 8VA
- OUTPUT SPECIFICATION**  
Relay : 1 NC (SPST)
- ENVIRONMENTAL CONDITIONS**  
- Indoor  
- Altitude of up to 2000m  
- Pollution degree II
- TEMPERATURE**  
Operating: -10°C to 55°C  
Storage: -20°C to 75°C  
Humidity: Up to 85% non-condensing
- MOUNTING**  
Panel mounting
- WEIGHT**  
198gms

ORDER CODE INFORMATION		
Product	Supply	Certification
MX300-1-C-CE	85V AC to 300V AC	CE

SERIAL COMMUNICATION	
Interface standard and protocol	RS485 and MODBUS RTU
Communication address	1 to 255
Transmission mode	Half duplex
Data types	Float and Integer
Transmission distance	500m maximum
Transmission Speed	300, 600, 1200, 2400, 4800, 9600, 19200 (in bps)
Parity	None, Odd, Even
Stop bits	1 or 2
Response time	500 ms (max and independent of baud rate)

ACCURACY	
Measurement	Accuracy
Voltage V <sub>L-N</sub>	±0.5% of Full scale
Current	±0.5% of Full scale
Frequency	±0.1% For L-N voltage : ≥50V For L-L voltage : ≥87V
Power Factor	±0.01
Active Power	1%
Reactive Power	2%
Apparent power	---
Trip Time	±5%

**NOTE :** 1) For Voltage, Current and Power resolution is automatically adjusted.  
2) For power factor, resolution is 0.001

Resolution	
Power Value (W)	Display (W)
<10K	9999
<100K	99.99k
<1M	999.9k
<10M	9999K
<100M	99.99M
<1000M	999.9M
<10000M	9999M

**SAFETY PRECAUTIONS**

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.  
If the equipment is not used in a manner specified by the manufacturer it might impair the protection provided by the equipment.  
Do not use the equipment if there is any mechanical damage.  
Ensure that the equipment is supplied with correct Voltage.

- CAUTION :**
1. Read complete instructions prior to installation and operation of the unit.
  2. Risk of electric shock.
  3. The equipment in its installed state must not come in close proximity to any heating sources, oils, steam, caustic vapors or other unwanted process by products.

**WIRING GUIDELINES**


- WARNING :**
1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement.
  2. Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
  3. Use lugged terminals.
  4. To reduce electromagnetic interference use of wires with adequate ratings and twists of the same in equal size shall be made with shortest connections.
  5. Layout of connecting cables shall be away from any internal EMI source.
  6. Cable used for connection to power source, must have a cross section of 1mm<sup>2</sup> to 2.5mm<sup>2</sup> (20 to 14AWG; 75°C(min)). These wires shall have current carrying capacity of 6A.

**INSTALLATION GUIDELINES**

- CAUTION :**
1. This equipment being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
  2. Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
  3. Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
  4. Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.
  5. The equipment shall not be installed in environmental conditions other than those mentioned in this manual.
  6. The equipment does not have a built-in-type fuse. Installation of external fuse of rating 276V AC / 0.5Amp for electrical circuitry / battery is highly recommended.


**MECHANICAL INSTALLATION**

- For installing the meter -
1. Prepare the panel cutout with proper dimensions as shown below.
  2. Push the meter into the panel cutout. Secure the meter in its place by fitting the clamp on the rear side. Fit clamps on both sides in diagonally opposite location for optimum fitting.
  3. For proper sealing, tighten the screws evenly with required torque.  
Terminal screw tightening torque : 0.68 N-m to 0.79 N-m (6.018 In-Lb to 6.992 In-Lb)  
Screw clamp tightening torque : 0.1N-m (0.885 Lb-inch)

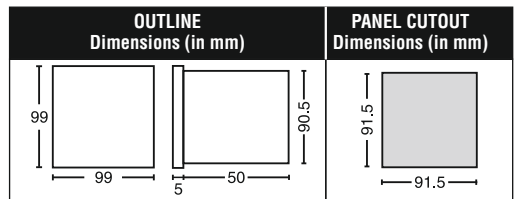


- MAINTENANCE**
1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
  2. Clean the equipment with a clean dry or damp cloth.  
Do not use any cleaning agent other than water.

**TERMINAL CONNECTIONS**

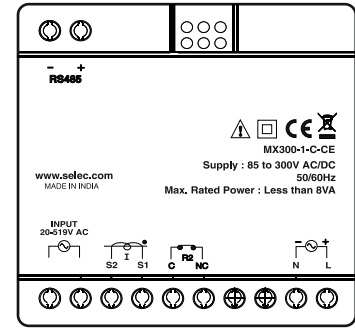

**FRONT PANEL DESCRIPTION**

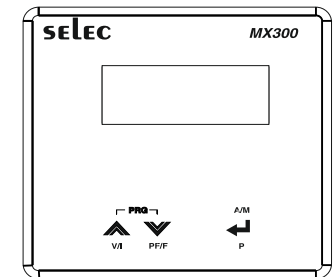

**ONLINE PAGE DESCRIPTION**

There are 3 dedicated keys labelled as INC, DEC, ENTER respectively. Simply press these keys to read the parameters. Units of corresponding parameter on display will automatically glow.

Key-1	▲
Key-2	▼
Key-3	↔

Key press	Online page description	
<b>1P2W</b>		
▲	Page1	Displays Phase Voltage
▲	Page2	Displays Phase Current
▼	Page1	Displays Power Factor
▼	Page2	Displays Frequency
↔	Page1	Displays Active Power
↔	Page2	Displays Reactive Power
↔	Page3	Displays Apperant Power

**SERIAL NUMBER DESCRIPTION**

Press ▲ key for 10 sec. to display 8 digit serial number only for 5 sec.

**AUTOMATIC / MANUAL MODE DESCRIPTION**

Press ↔ key for 5 seconds to toggle between Automatic and Manual mode. But DIP page configuration must be kept 000 to turn this function ON.  
**Note :** By default unit operates in automatic mode. In automatic mode online pages scroll automatically at the rate of 5 seconds per page. In automatic mode when any key is pressed, unit temporarily switches to manual mode and the appropriate page is displayed, also if any key is not pressed for 5 sec, unit resumes automatic mode.

## CONFIGURATION

There are three dedicated keys with symbol **▲ ▼ ↵**  
**Note** : Setting should be done by professional after going through this user manual and having understood the application situation.

For the configuration setting mode :

- Use **▲▼** key for 3 sec to enter and exit from configuration menu.
- Use **▲** key to increment the value .
- Use **▼** key to edit the value and shift the cursor for next digit to edit .
- Press **↵** key to save value and go to next page.

## TRIP CONDITION DESCRIPTION

1. To check the trip condition, long press the DEC key for 3 sec. And to come out of from trip condition status mode, again long press the same DEC key for 3 sec
2. To check whether multiple trip conditions are occurred or not, user must enter into trip condition status mode and press INC key.
3. When unit is satisfying the trip condition for set trip time, then TRIP symbol will blink & once trip time is over, it will trip and symbol will be continuously ON.

## PT PRIMARY SETTING

**First Three digits will be displayed on first screen with 'k' symbol ON. And next three digits, on second screen.**

Example:- PT PRI 123456

"K" ON 123 will get displayed on first screen

"K" OFF 456 will get displayed on second screen

## MODBUS REGISTER ADDRESS LIST

Readable parameters for communication Model only:  
 [Length (Register): 2; Data structure: Float]

Address	Hex Address	Parameter
30000	0x00	Voltage
30002	0x02	Current
30004	0x04	Active Power
30006	0x06	Reactive Power
30008	0x08	Apparent Power
30010	0x0A	Power Factor
30012	0x0C	Frequency
30132	0x84	Serial Number Data Type : Hex

Config. page	Function	Range or Selection	Factory Setting	Description	Display
—	Password	0000 to 9998	1000		PSYd
1	Change Password	No / Yes	No		CPYd
1.1	New Password	0000 to 9998	0000		NPYd
2	CT Secondary	5A	5		CTSE
3	CT Primary	5A to 9999A	5		CTPF
4	PT Secondary	100V to 500V	350		PTSE
5	PT Primary	100V to 500kV	350		PTPF
6	Slave Id	1 to 255	1		SL Id
7	Baud Rate	300/600/1200/2400/ 4800/9600/19200(bps)	9600		BRUd
8	Parity	None/Odd/Even	None		PTBY
9	Stop Bit	1 or 2	1		STPB
10	Voltage Enable	Yes / No	No	The sub pages of this parameter will be displayed only if voltage enable is selected as yes. If selected no then directly current enable page will be displayed.	VLEN
10.1	Over Voltage	Yes / No	No	If over voltage setting is enabled then on next page the value of over voltage can be changed. If disabled then directly under voltage page will be displayed.	OVLG
10.1.1	Over Voltage Setting	60V to 519V	250	If the measuring voltage become greater than set over voltage, relay will be tripped after set trip time duration.	OVSb
10.2	Under Voltage	Yes / No	No	If under voltage is enabled then on next page the value of under voltage can be changed. If disabled then directly voltage hysteresis page will be displayed.	ULVG
10.2.1	Under Voltage Setting	50V to 509V	100	If the measuring voltage become lesser than set lower voltage, relay will be tripped after set trip time duration.	ULSb
10.3	Voltage Hysteresis	0V to 10V	10	If relay is trip due to over/under voltage for set trip time, then depending on value of voltage hysteresis the relay recovery will takes place.	VHYb
10.4	Voltage Trip Time	0 to 300 sec	10 sec	If the measuring voltage become greater/lesser than set over/under voltage, relay will be tripped only if the condition sustains for the time set in trip time.	VTFP
11	Current Enable	Yes / No	No	The sub pages of this parameter will be displayed only if current enable is selected as yes. If selected no then directly factory default page will be disabled.	CFEN
11.1	Over Current	Yes / No	No	If over current is enabled then on next page the value of over current can be changed. If disabled then directly under current page will be displayed.	OCLF
11.1.1	Over Current Setting	1.2A to 6A	4	If the measuring current become greater than set over current, relay will be tripped after set trip time duration.	OCSb
11.2	Under Current	Yes / No	No	If under current is enabled then on next page the value of under current can be changed. If disabled then directly current hysteresis page will be displayed.	UCLF
11.2.1	Under Current Setting	0.1A to 4.9A	1	If the measuring current become lesser than set lower current, relay will be tripped after set trip time duration.	UCSb
11.3	Current Hysteresis	0 to 1A	1	If relay is trip due to over/under current for set trip time, then depending on value of current hysteresis the relay recovery will takes place.	CHYb
11.4	Current Trip Time	0 to 300 sec	10 sec	If the measuring current become greater/lesser than set over/under current, relay will be tripped only if the condition sustains for the time set in trip time.	CTFP
12	Factory Default	Yes / No	No	If factory default is enabled then all parameters value gets set to default values.	FdFb

## MODBUS REGISTER ADDRESS LIST

Readable parameters for communication Model only: [Length (Resister): 2;Data structure:Float]

Address	Hex Address	Parameter	Range	
40000	0x00	Password	Min value : 0	Max value : 9998
40001	0x01	CT Secondary	Value : 5	Fixed (can not be changed)
40002	0x02	CT Primary	Min value : 5	Max value : 9999
40003	0x03	PT Secondary	Min value : 100	Max value : 500
40004	0x04	PT Primary	Min value : 100	Max value : 500k
40006	0x06	Slave Id	Min value : 1	Max value : 255
40007	0x07	Baud Rate	Value : 0x0000	Meaning : 300
			Value : 0x0001	Meaning : 600
			Value : 0x0002	Meaning : 1200
			Value : 0x0003	Meaning : 2400
			Value : 0x0004	Meaning : 4800
			Value : 0x0005	Meaning : 9600
			Value : 0x0006	Meaning : 19200
40008	0x08	Parity	Value : 0x0000	Meaning : None
			Value : 0x0001	Meaning : Odd
			Value : 0x0002	Meaning : Even
40009	0x09	Stop Bit	Value : 0x0000	Meaning : 1
			Value : 0x0001	Meaning : 2
40010	0x0A	Voltage Enable	Min Value : 0	Max Value : 1
40011	0x0B	Over Voltage	Min Value : 0	Max Value : 1
40012	0x0C	Over Voltage Setting	Min Value : 601	Max Value : 5190
40013	0x0D	Under Voltage	Min Value : 0	Max Value : 1
40014	0x0E	Under Voltage Setting	Min Value : 500	Max Value : 5089
40015	0x0F	Voltage Hysteresis	Min Value : 0	Max Value : 100
40016	0x10	Voltage Trip Time	Min Value : 0sec	Max Value : 300sec
40017	0x11	Current Enable	Min Value : 0	Max Value : 1
40018	0x12	Over Current	Min Value : 0	Max Value : 1
40019	0x13	Over Current Setting	Min Value : 12	Max Value : 60
40020	0x14	Under Current	Min Value : 0	Max Value : 1
40021	0x15	Under Current Setting	Min Value : 1	Max Value : 49
40022	0x16	Current Hysteresis	Min Value : 0	Max Value : 10
40023	0x17	Current Trip Time	Min Value : 0sec	Max Value : 300sec
40024	0x18	Factory Default	Min Value : 0	Max Value : 1

DIP SWITCH CONFIGURATION			
Key configuration			Parameter
Key-1	Key-2	Key-3	
0	0	0	Normal Mode-Auto/Manual
0	0	1	Voltage
0	1	0	Current
0	1	1	Power Factor
1	0	0	Active Power
1	0	1	Reactive Power
1	1	0	Apparent Power
1	1	1	Frequency

**NOTE :**

1. Hysteresis & trip time is common for over - under voltage as well as over - under current, If any of these parameter is disabled then user won't be able to see hysteresis & trip time parameters.

2. Difference between under and over voltage will always be of maximum hysteresis value. (same is applicable for current)


**Example:-** If under voltage is 50V then, over voltage can be set from 60.1V and onwards.

3. In configuration menu, if any key is untouched for 30 sec, unit resumes to online pages.


4. For the following parameters, the value to be entered should be multiplied by 10.

- i) Over Voltage            iv) Over Current
- ii) Under Voltage        v) Under Current
- iii) Voltage Hysteresis   vi) Current Hysteresis

**Example:-** If voltage hysteresis is to be set at 3V then the value of voltage hysteresis to be entered becomes 30.

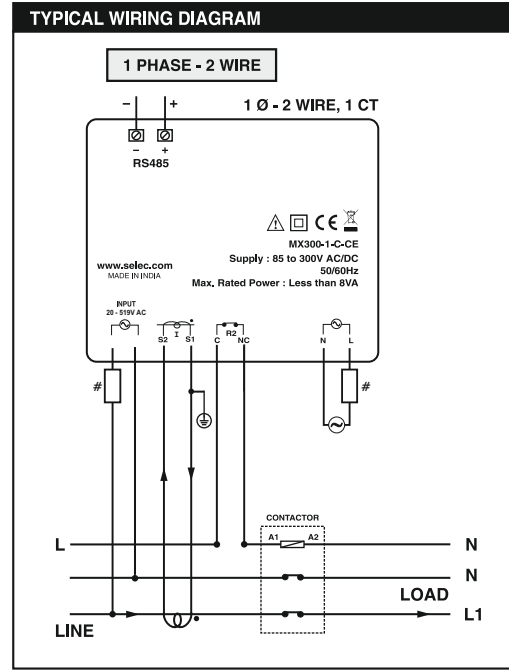

**CONNECTION DIAGRAM FOR COMMUNICATION**

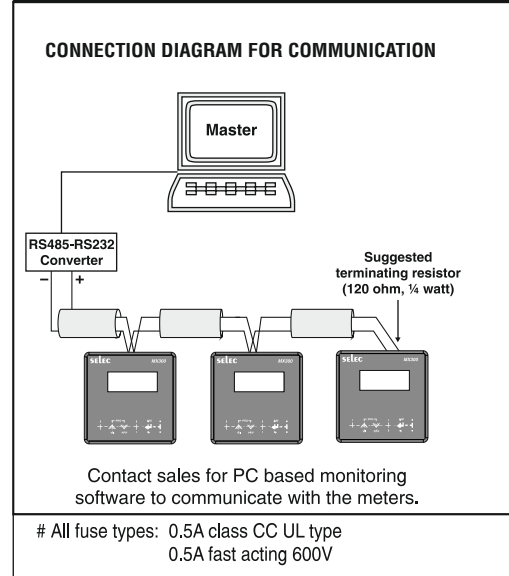

(Specifications are subject to change, since development is a continuous process.)

**Selec Controls Pvt. Ltd., India**

Factory Address :  
EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape,  
Navi Mumbai - 400 710, INDIA.  
Tel. No. : +91-22-41 418 419/430 | Fax No. : +91-22-28471733  
Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)  
Website : www.selec.com | Email : sales@selec.com