



PARAMETER	SPECIFICATIONS
Display	4 + 4 digits, Digit Height:- White Digit:- 16.7 mm Green Digit:- 9 mm 7 segment digital display
LED Indications	OUT1 : RH Control ON AL1 : RH Alarm ON
Keys	3 keys for digital setting
RH Range	0% to 100%

INPUT SPECIFICATIONS	
Input Signal	RH (HS-A-100)
Sampling time	250 ms
Input Filter (FTC)	0.2 to 10.0 sec
Resolution	0.1 / 1
Relay action RH	Humidifier / Dehumidifier

FUNCTIONAL SPECIFICATIONS	
Control Method	ON-OFF control

SENSOR INFORMATION	
PARAMETER	SPECIFICATIONS
Cable Length	1 Meter
Dimensions (mm)	52 X 28.8 X 18
Input Range	5V DC
Weight (in gm)	33
Sensor Temperature	Operating : -20 to 100°C Storage : -40 to 120°C

OUTPUT	
RH Control output	Relay contact (SPDT) 10A@250V AC / 30V DC, Resistive
RH Alarm Output	Relay contact (SPDT) 10A@250V AC / 30V DC, Resistive

POWER SUPPLY	
Supply Voltage	90 to 270V AC / DC (AC : 50 / 60 Hz)
Power Consumption	5 VA max @230V AC
Temperature	Operating : 0 to 50°C Storage : -20 to 75°C
Humidity	95% RH (non-condensing)
Weight	200 gm

SAFETY PRECAUTIONS

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Read complete instructions prior to installation and operation of the unit.

WARNING : Risk of electric shock.

WIRING GUIDELINES

WARNING :

- To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- To eliminate electromagnetic interference use short wire with adequate ratings; twists of the same in equal size shall be made. For the input and output signal lines, be sure to use shielded wires and keep them away from each other.
- Cable used for connection to power source, must have a cross section of 1mm² or greater. These wires shall have insulation capacity made of at least 1.5kV.
- When extending the thermocouple lead wires, always use thermocouple compensation wires for wiring. For the RTD type, use a wiring material with a small lead resistance (5Ω max per line) and no resistance differentials among three wires.
- A better anti-noise effect can be expected by using standard power supply cable for the instrument.

MAINTENANCE

- The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- Clean the equipment with a clean soft cloth. Do not use Isopropyl alcohol or any other cleaning agent.


INSTALLATION GUIDELINES

- This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
- Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- Circuit breaker or mains switch must facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
- Use and store the temperature controller within the specified ambient temperature and humidity range as mentioned in this manual.

CAUTION

- When powering up for the first time, disconnect the output connections.
- Fuse Protection : The unit is normally supplied without a power switch and fuses. Make wiring so that the fuse is placed between the mains power supply switch and the controller. (2 pole breaker fuse - rating : 275V AC,1A for electrical circuitry is highly recommended)
- Since this is a built-in-type equipment (finds place in main control panel), its output terminals get connected to host equipment. Such equipment shall also comply with basic EMI/EMC and other safety requirements like BSEN61326-1 and BSEN61010 respectively.
- Thermal dissipation of equipment is met through ventilation holes provided on chassis of equipment. Such ventilation holes shall not be obstructed else it can lead to a safety hazard.
- The output terminals shall be strictly loaded to the manufacturer specified values /range.

MECHANICAL INSTALLATION

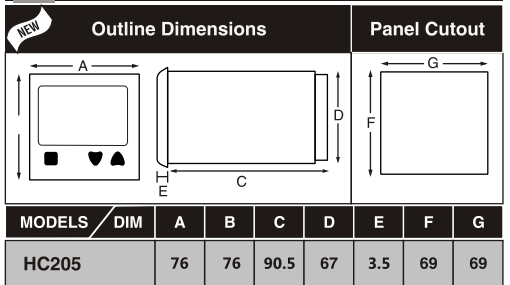

- Prepare the panel cutout with proper dimensions as shown above.
- Fit the unit into the panel with the help of clamp given.
- The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam, or other unwanted process by-products.
- Use the specified size of crimp terminals (M3.5 screws) to wire the terminal block. Tighten the screws on the terminal block using the tightening torque within the range of 1.2 N.m.
- Do not connect anything to unused terminals.


EMC GUIDELINES

- Use proper input power cables with shortest connections and twisted type.
- Layout of connecting cables shall be away from any internal EMI source.


LOAD CONNECTIONS

- The service life of the output relays depends on the switching capacity and switching conditions. Consider the actual application conditions and use the product within the rated load and electrical service life.
- Although the relay output is rated at 5/10 amps it is always necessary to use an interposing relay or contactor that will switch the load. This avoids damage to the controller in the event of a fault short developing on the power output circuit.
- Always use a separate fused supply for the "power load circuit" and do not take this from the live and Neutral terminals supplying power to the controller.

For load current less than 0.5A

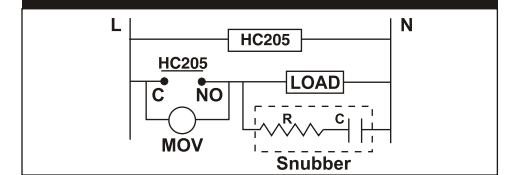

For bigger loads, use interposing relay / contactor

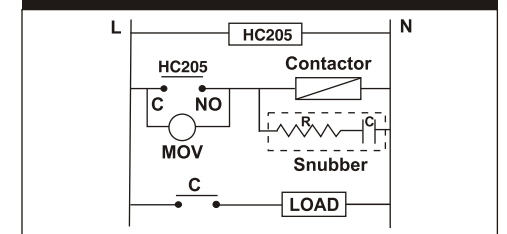


ELECTRICAL PRECAUTIONS DURING USE


Electrical noise generated by switching of inductive loads can create momentary disruption, erratic display, latch up, data loss or permanent damage to the instrument.

- To reduce noise:**
- Use of snubber circuits across loads as shown above, is recommended.
 - Use separate shielded wires for inputs.

TERMINAL CONNECTIONS

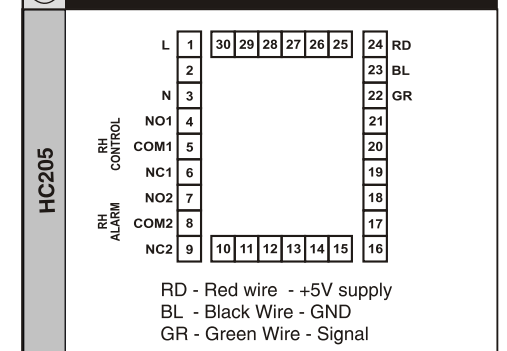


FRONT PANEL DESCRIPTION

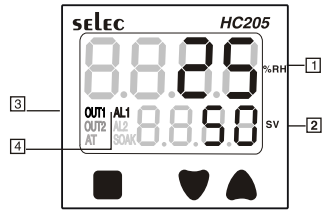


1	Process-value/ Parameter display/ Set point display	1) Display process value of RH. 2) Displays the parameter symbols at configuration mode/online menu. 3) Displays error conditions of RH. (Refer Table 2 on page 2)
2	Parameter setting display	1) Display set value of RH. 2) Displays the parameter settings at configuration mode/online menu.
3	Control output indication	The OUT1 is lit when the RH control output is ON
4	Alarm Output indication	The AL1 is lit when the RH Alarm output is ON

SENSOR DIMENSION (TOP & SIDE)


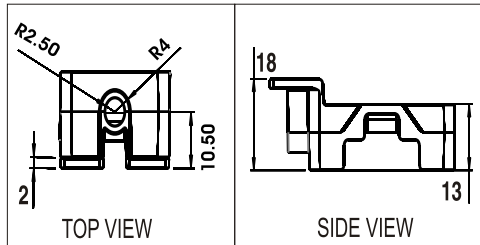


SENSOR DIMENSION (FRONT & BACK)

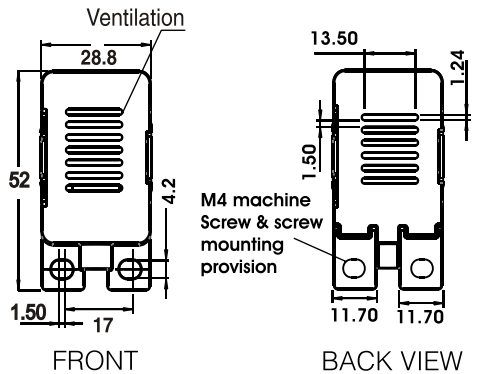

NOTE : 1) All Dimensions in mm.
2) Length of the cable can be increased by using compensation cable upto 3 meter. After that accuracy may vary by 1% / Meter.

HUMIDITY SENSOR PERFORMANCE

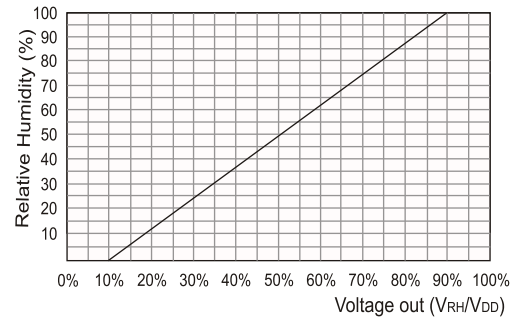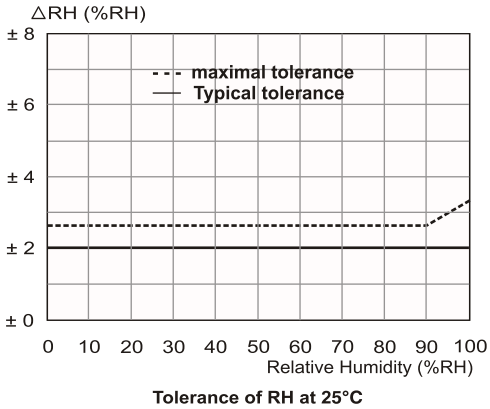

Relation between the ratiometric analog voltage output and measured relative humidity.

RECOMMENDED OPERATING CONDITION

- The sensor shows best performance when operated within recommended normal humidity range of 20 to 80%RH, respectively.
- Long term exposure to conditions outside normal range, especially at high humidity, may temporarily offset the RH signal.
- After returning to normal humidity range the sensor will slowly come back to calibration state by itself.
- Prolonged exposure to extreme condition may accelerate ageing.

FRONT KEYS DESCRIPTION

FUNCTIONS	KEY PRESS
ONLINE	
To view RH config Level	Press \heartsuit key for 3 sec.
To view Protection Level	Press \blacktriangle + \heartsuit keys for 3 sec.
To view online parameters	Lower display selectable between SETH using \blacktriangle key.
To change online parameter values	Press up key then Press \blacktriangle + \heartsuit / \heartsuit to change parameter value.

PROGRAMMING MODE

To view parameters on the same level. \blacktriangle or \heartsuit key once to view the next or previous function in operational menu.

To increase or decrease the value of a particular parameter. \blacktriangle + \heartsuit to increase and \heartsuit + \blacktriangle to decrease the function value.
Note : Parameter value will not alter when respective level is locked.

NOTE : The unit will auto exit programming mode after 30 seconds of inactivity.

OR By pressing the \blacktriangle or \heartsuit or \blacktriangle + \heartsuit keys for 3 seconds.

ERROR DISPALY

When an error has occurred, the upper display indicates error codes as given below.

Error	Meaning	Control Output Status
H5.b P	RH Sensor break / over range condition	OFF

HC205


Programming online parameters

RH Setpoint : Default : 40.0
Range : HSPL to HSPH
Pressing \blacktriangle key will show on Upper display : 5 E t H
Lower display : <40.0>
Press \blacktriangle + \heartsuit / \heartsuit keys to increment / decrement 5 E t H value.

USER GUIDE

1) ON/OFF control action
The relay is 'OFF' up to the set RH (Relative Humidity) and 'ON' above the set RH (Relative Humidity). As the RH (Relative Humidity) of the system drops, the relay is switched 'OFF' at a RH (Relative Humidity) slightly Lower than the set point.

Hysteresis : The difference between the RH (Relative Humidity) at which relay switches 'ON' and at which relay switches 'OFF' is the hysteresis or dead band.

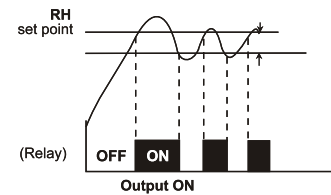

2. Display Offset adjustment :
This function is used to adjust the display value in cases where it is necessary for display value to agree with another recorder or indicator, or when the sensor Cannot be mounted in correct location.

3. Restart time delay:
This parameter is used to protect the load from restarting in a short period of time and can be set between 0 to 59.59 minutes.
Example : If this parameter is set at 2 mins, the relay will cut off at the set RH, but will not restart for a minimum of 2 mins, even if the differential is achieved earlier.

4. Resolution :
When set as 0.1 for RH
PV auto ranges to 0.0 % < PV < 100.0%

CALIBRATION CERTIFICATE

Model No : HC205

Claimed Accuracy :
for RH input:
± 3% for RH 10% to 80%
± 4% for Below 10% & Above 80%

Standard used for Calibration of product is traceable to NABL

The RH curves are linearized in this microprocessor based product; and hence the values interpolated across the input range are also equally accurate ; at every point in the curve.

Unit is accepted as accuracy is within the specified limit of claimed accuracy and certificate is valid upto one year from the date of issue.

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
Tel. No. : +91-22-41 418 452/468 | Fax No. : +91-22-28471733
Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)
Website : www.selec.com | Email : sales@selec.com

CONFIGURATION INSTRUCTIONS

KEY FUNCTIONS



Press for 3 sec to enter Level 0

Press once to view previous parameter in configuration menu



Press for 3 sec to enter protection Level




Allows the user to increase or decrease associated parameter value



To exit configuration menu press any of these keys for 3 sec

OPERATIONAL MENU

POWER ON

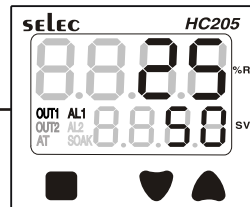

Note: At power ON lower display shows (momentary) RH

Press for 3sec.

LEVEL 0


Humidity Level			
Display	Description	Default Value	Range
HRES	Humidity Display Resolution	0.1	0.1 / 1
HRA \bar{L}	Humidity Alarm low	0	0 to SV
HRA \bar{H}	Humidity Alarm high	100	SV to 100
HSP \bar{L}	Humidity Set point low	0	0 to HSPH
HSP \bar{H}	Humidity Set point high	100	HSP \bar{L} to 100
HFTC	Humidity Filter time constant	1.0	0.2 to 10.0 sec
HRCt	Humidity Control action for RH	DHUM	DHUM / HUM
HHYS	Humidity Hysteresis	0.5	0.1 to 99.9%RH
HdbS	Humidity Display bias	0.0	-19.9 to 19.9%RH
RtDL	Restart time delay	0.00	0.00 to 59.59 (Mins.)
HPSE	Level 0 Factory default (Reset all)	NO	NO / YES

Press for 3sec

Protection Level			
Display	Description	Default Value	Range
SP-H	Lock Setpoint	UNL \bar{L}	UNLK / READ
LUL \bar{L}	Lock level 0	UNL \bar{L}	UNLK / READ

Note

1. Locking parameters will not permit change in the value of respective level parameters.
2. Continuous operation of / keys for SP or other parameters makes update speed faster in 3 stages after 3 sec.

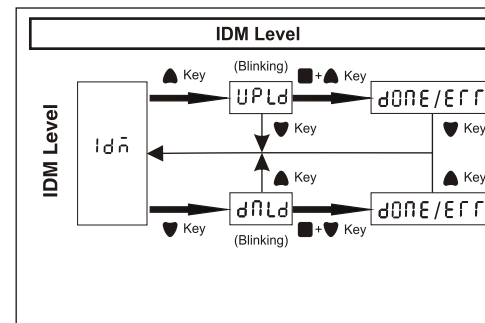

Display	Parameter Description
id \bar{n}	Independent Downloader Module
UPL \bar{d}	Upload from product to IDM
dNL \bar{d}	Download from IDM to product
dONE	Operation Successful
Err	Operation unsuccessful

Note:

- 1) IDM Level - IDM should be connected before powering on the unit to enter in IDM Level.
- 2) Long Press or key for 3 sec to exit from IDM mode.

Caution: After Downloading, switch of the unit and then remove the IDM